

# TECHNICAL DATA

## SINGLE DIRECTION VIBRATORY PLATES

BP 20/45



### Compact

Guide handle without tool folding - fits in any car boot



### Plug and Play retrofit kits

Assembly in no time at all - machine can be individually customised



### All-round protection


Protective bar and cyclone filter (GX 160) as standard

**Shipping dimensions in m3**

**BP 20/45**

0,186

n

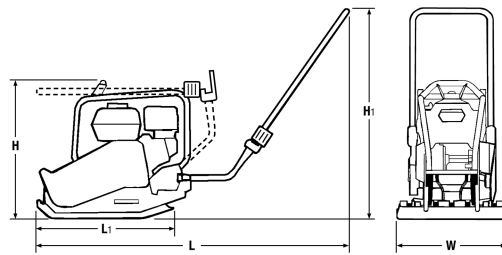

**Standard Equipment**

- Vibration insulated steering handle, foldable
- Detachable steering handle
- Hand-arm vibrations <5m/s<sup>2</sup>
- Cyclone dust separator
- Engine protection frame
- Automatic shutdown at low oil level
- Highly wear resistant base plate
- Recoil starter
- Fully protected V-belt
- Carrying handles
- Single point lifting device
- 3-2-1 Warranty

**Optional Equipment**

- Sprinkler system (10l)
- Sprinkler system (7l)
- Spraying system, base plate (450mm)
- Transport wheels
- Vulcolan mat
- Hour meter
- Special painting
- Service Kit
- Tool kit

**Dimensions in mm**

	H	H1	L	L1	W
<b>BP 20/45</b>	567	861	1276	558	450

**Technical Data**

**BOMAG  
BP 20/45**

**Weights**

Operating weight CECE .....	kg	92
Basic weight .....	kg	91

**Dimensions**

Working width .....	mm	450
---------------------	----	-----

**Driving Characteristics**

Working speed, max. ....	m/min	30
Max. gradeability (dep. on soil con.) .....	%	30

**Drive**

Engine manufacturer .....	Honda
Engine type .....	GX 160
Emission stage .....	Stage V / CARB P.3
Cooling .....	air
Number of cylinders .....	1
Performance SAE J 1349 .....	kW 3,6
Speed .....	min-1 3.600
Drive system .....	mech.
Fuel .....	Gasoline
Fuel consump. aver. during operation .....	l/h 1,1

**Exciter system**

Frequency .....	Hz	90
Centrifugal force .....	kN	20
Amplitude .....	mm	2,00

**Capacities**

Fuel .....	l	3,1
------------	---	-----

Technical modifications reserved. Machines may be shown with options.



PRE 834 96 010

120325 Sa

**BOMAG**  
Hellerwald  
D-56154 Boppard  
P.O. Box 5162  
Tel. (0)6742 - 1000  
Fax (0)6742 - 3090

